


Brendon bolt-on rear reel assembly instructions

Kit contents

Part No: **BBWRCMN01**

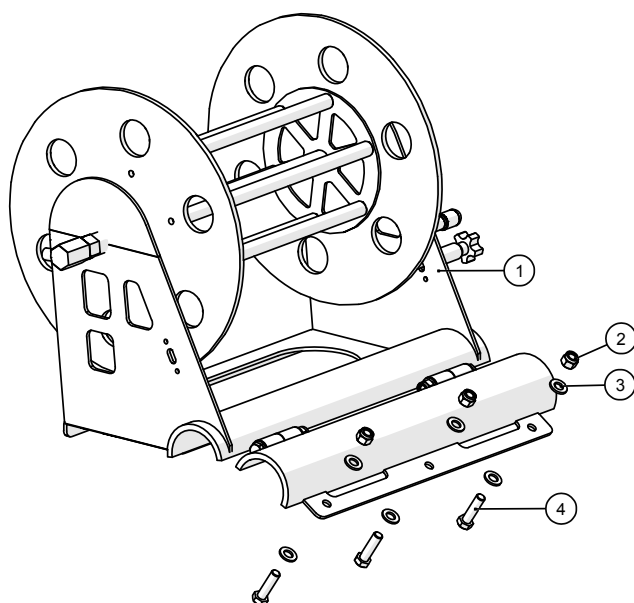

ID	Description	Qty
1	Bolt-on Reel Kit	1
2	M12 Nyloc Nut	3
3	M12 flat Washer	6
4	M12 x 45mm Bolt	3

Fitting instructions

The following procedure details the steps required to fit a Brendon bolt-on reel kit to a standard back bar on a Brendon Bowser Washer.



CAUTION: The **BBWRDMN01** weighs **27.5Kg**. This procedure requires 2 people.



CAUTION: Pinch points and crush hazards are present when fitting the bolt-on Rear reel kit, it is advised to wear safety gloves and boots.


Recommended Personal Protective Equipment (PPE) for this procedure:



1. Ensure Brendon Bowser washer is on stable ground and the handbrake is on.




2. Carefully position (2 persons required) the bolt on rear reel kit on to the back bar.

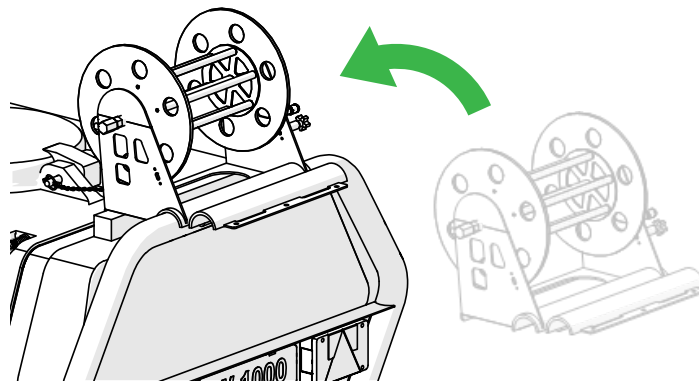

TIP: Place a piece or 2 of lumber (or something similar) that is 9-10cm high on the rear of the Brendon bowser water tank to support the bolt on rear reel kit when getting it into position.

3. Rotate the hinged tube section to wrap around the back bar and fix the nuts and bolts finger tight.

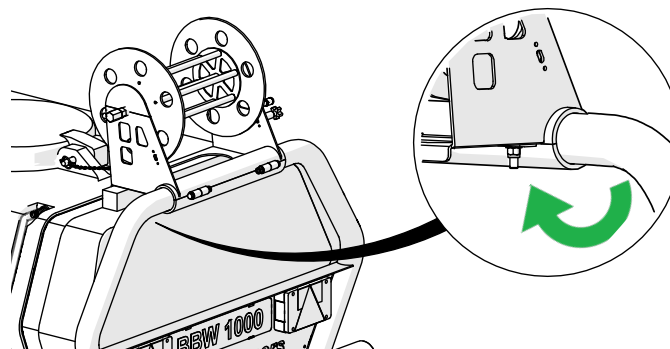

4. Ensure the position of the reel is in the centre of the back bar and the base plate is level, then tighten the bolts to 60nM.
5. Fit the link and delivery hoses as required.

